

Tech Tip



Tech Tip
NO. 00002 PAGE 1 OF 1

N170S NuVinci HUB

Noisy Seals

June 27, 2007 REV. 001

PART NUMBERS:

N170S Serial # ALL

DESCRIPTIONS:

Squeaky noise in the rear hub

PARTS REQUIRED :

Silicone or Teflon lube

INSTALLATION OVERVIEW:


- 1) Remove wheel from bicycle.
- 2) If bicycle has equipped hub or roller brake remove and place aside.
- 3) Wipe and clean the axle seals.
- 4) Put one drop of oil on the axle seal.
- 5) Rotate axle by hand to distribute oil along seal.
- 6) Wipe off excess oil with clean rag.
- 7) Flip wheel with input driver facing up.
- 8) Remove freewheel per instructions in the dealer technical manual. Wipe and clean axle and input driver seals.
- 9) Put one drop of oil on the input driver seal and one drop of oil on the axle seal.
- 10) Rotate input driver by hand to distribute oil along seal.
- 11) Rotate axle by hand to distribute oil along seal.
- 12) Wipe off excess oil with clean rag and install freewheel.
- 13) Reinstall brake if equipped, tighten and secure wheel per NuVinci Owners Manual

TORQUE SPECS:

N/A

MAINTENANCE REQUIREMENTS:

N/A

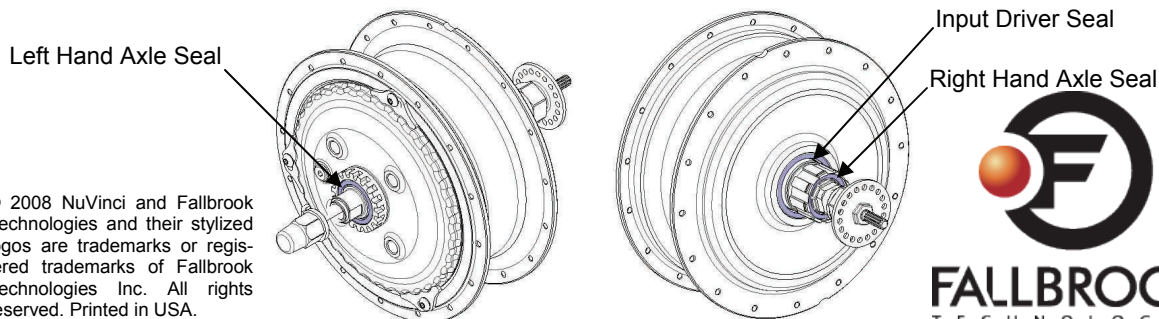

© 2008 NuVinci and Fallbrook Technologies and their stylized logos are trademarks or registered trademarks of Fallbrook Technologies Inc. All rights reserved. Printed in USA.

